


# SHAD

## VOGE 500 AC '22

### TOP MASTER V0AC52ST

BCN

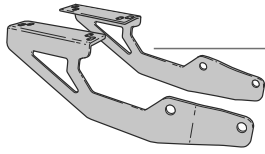

**1** 263171 x 1 →  
263172 x 1 ←



**2** 260417 x 4  
Ø16 Ø9 x 16



**3** 304169 x 2  
M8x50 DIN 7380



**4** 304039 x 2  
M8x40 DIN 7380



**5** 304036 x 2  
M8x45 DIN 7380

## WARNING! ⚠

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

